


## Window Screws


Add a Y or Z to the end of the product code for Yellow or Bright Zinc finish

## A - FURNITURE TO UNREINFORCED

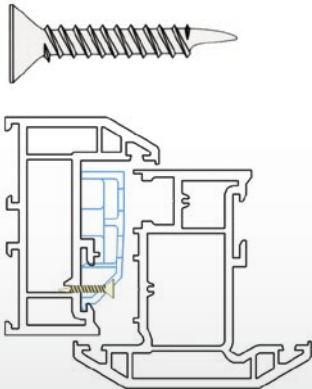


CODE	SIZE
FAS005	3.9 X 16
FAS006	3.9 X 19
FAS007	3.9 X 22
FAS008	3.9 X 25
FAS009	4.8 X 25
FAS010	3.9 X 32
FAS011	3.9 X 38
FAS012	4.8 X 38
FAS013	3.9 X 45
FAS014	3.9 X 55

## B - FRICTION STAY FASTENERS

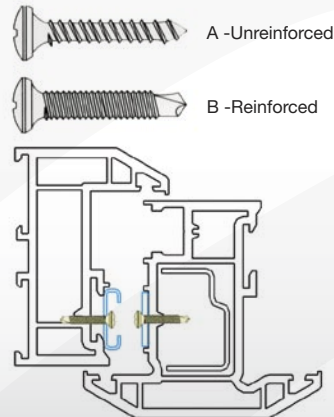


	CODE	SIZE
B	FAS028	M4 X 25
	FAS029	M4 X 16
A	FAS031	4.8 X 16
	FAS032	4.8 X 25
	FAS033	4.8 X 38
	FAS053	4.2 X 19

## C - FURNITURE TO REINFORCED

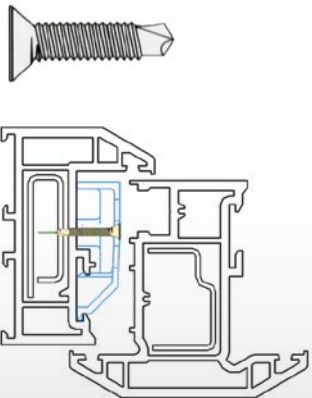


CODE	SIZE
FAS015	3.9 X 13
FAS016	3.9 X 16
FAS017	3.9 X 19
FAS018	3.9 X 25
FAS019	4.8 X 32
FAS020	M4 X 16
FAS021	M4 X 19
FAS022	M4 X 25
FAS023	M4 X 32
FAS024	M4 X 55

## D - WINDOW HANDLE FASTENERS

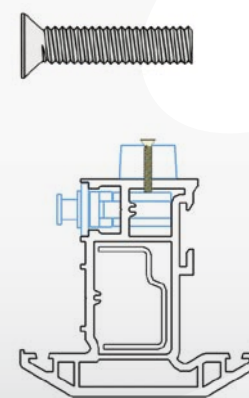


CODE	SIZE
FAS043	M5 X 16
FAS044	M5 X 20
FAS045	M5 X 25
FAS046	M5 X 30
FAS047	M5 X 35
FAS048	M5 X 40
FAS049	M5 X 50
FAS051	M5 X 70
FAS052	M5 X 80

## E - MULLIONS &amp; TRANSOMS

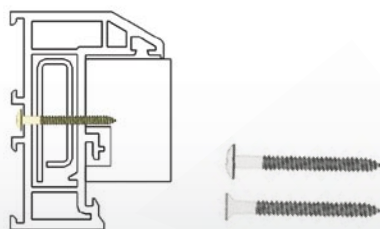


CODE	SIZE
FAS025	4.2 X 55
FAS026	5.5 X 60
FAS027	5.5 X 70

## F - REINFORCED FASTENING

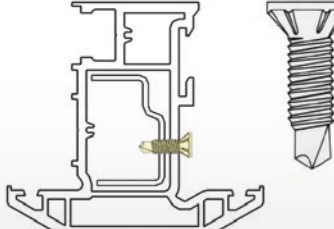

CODE	SIZE
FAS001	3.9 X 13
FAS002	M4 X 13
FAS003	3.9 X 16
FAS004	M4 X 16

## G - FRAME TO FRAME

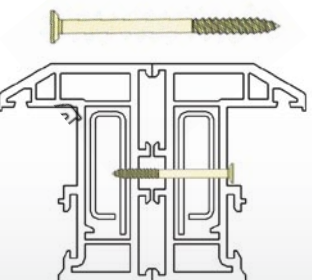

CODE	SIZE
FAS039	4.8 X 55
FAS040	4.8 X 60
FAS041	4.8 X 80
FAS042	4.8 X 95

- A - Furniture to unreinforced - Spoon point screws
- B - Friction Stay Fasteners:
  - i). Pointed screws - PVC
  - ii). Drill point - reinforced
 (These have a raised countersunk head which centralises the stay)
- C - Drill point screws: Into reinforcement
- D - Machine screws - For fixing into tapped holes
- E/G - Long screws for fixing frame to frame or frame to mullions & transoms (mechanical jointing)
- F - Reinforced fasteners - Fluted on underside of countersunk head, which cut a feature into PVC to receive the screw head.